


RHM-SSFD

Front Drop

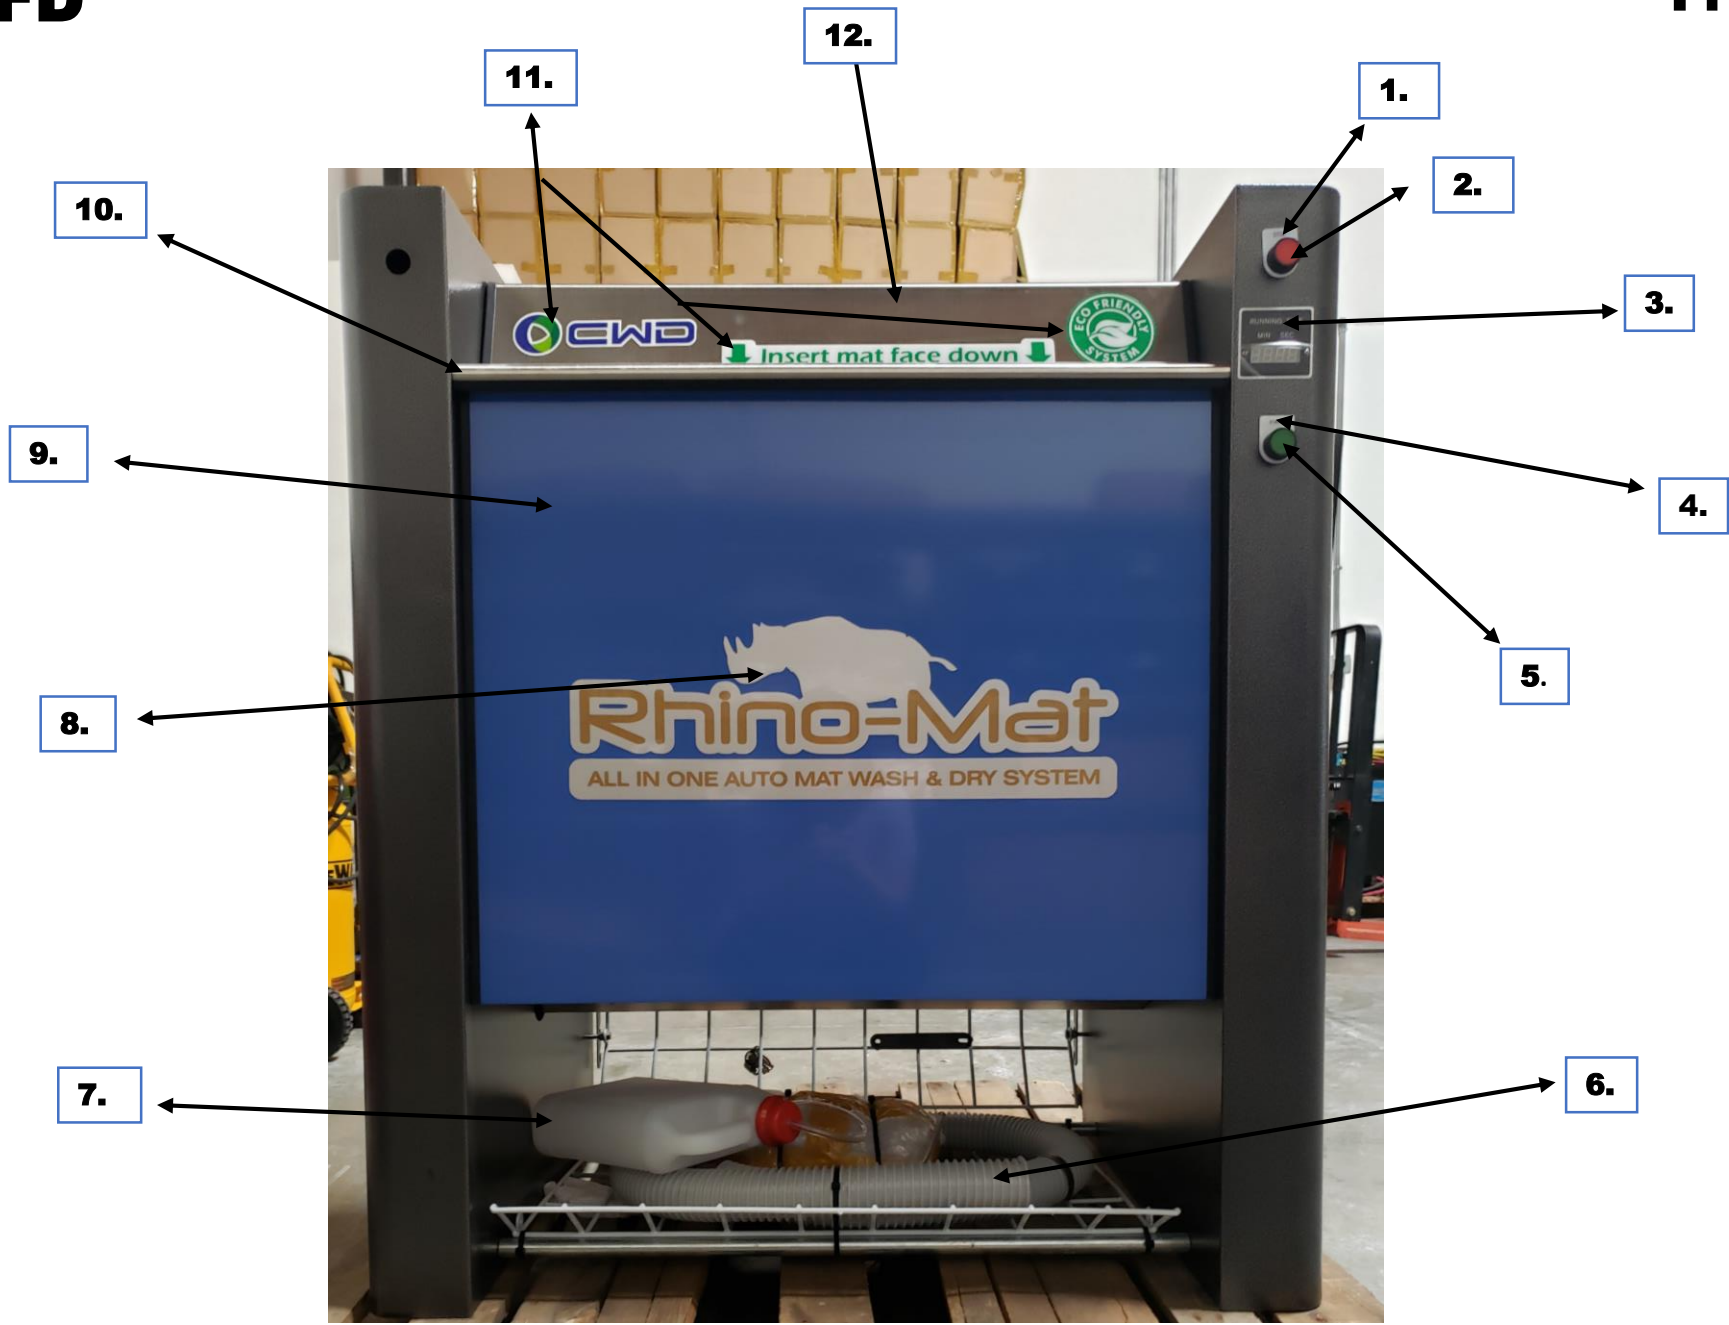

- 1. RHM-BTNPS
- 2. RHM-BTR
- 3. RHM-LSC
- 4. RHM-BTNPG
- 5. RHM-BTG
- 6. RHM-DH
- 7. RHM-CT
- 8. RHM-RDECAL
- 9. RHM-FPT
- 10. RHM-FSSP
- 11. RHM-RDECALSM
- 12. RHM-FLC

- 13. RHM-SSTCR
- 14. RHM-R800
- 15. RHM-BR800
- 16. RHM-F800
- 17. RHM-RGL
- 18. RHM-SSR
- 19. RHM-RGS



72. RHM-HRB





- 20. RHM-VDRMH
- 21. RHM-VMH
- 22. RHM-AVM110V

20.

21.


22.



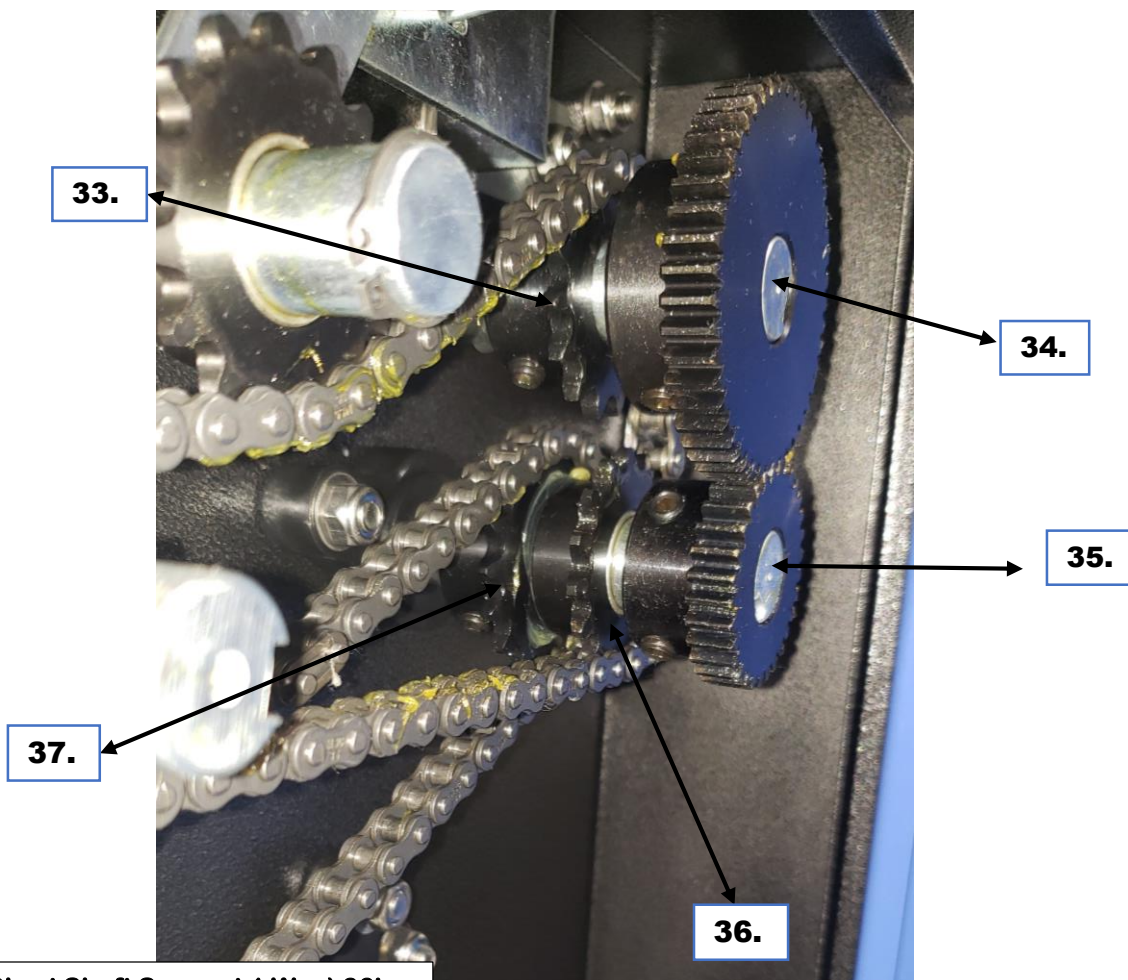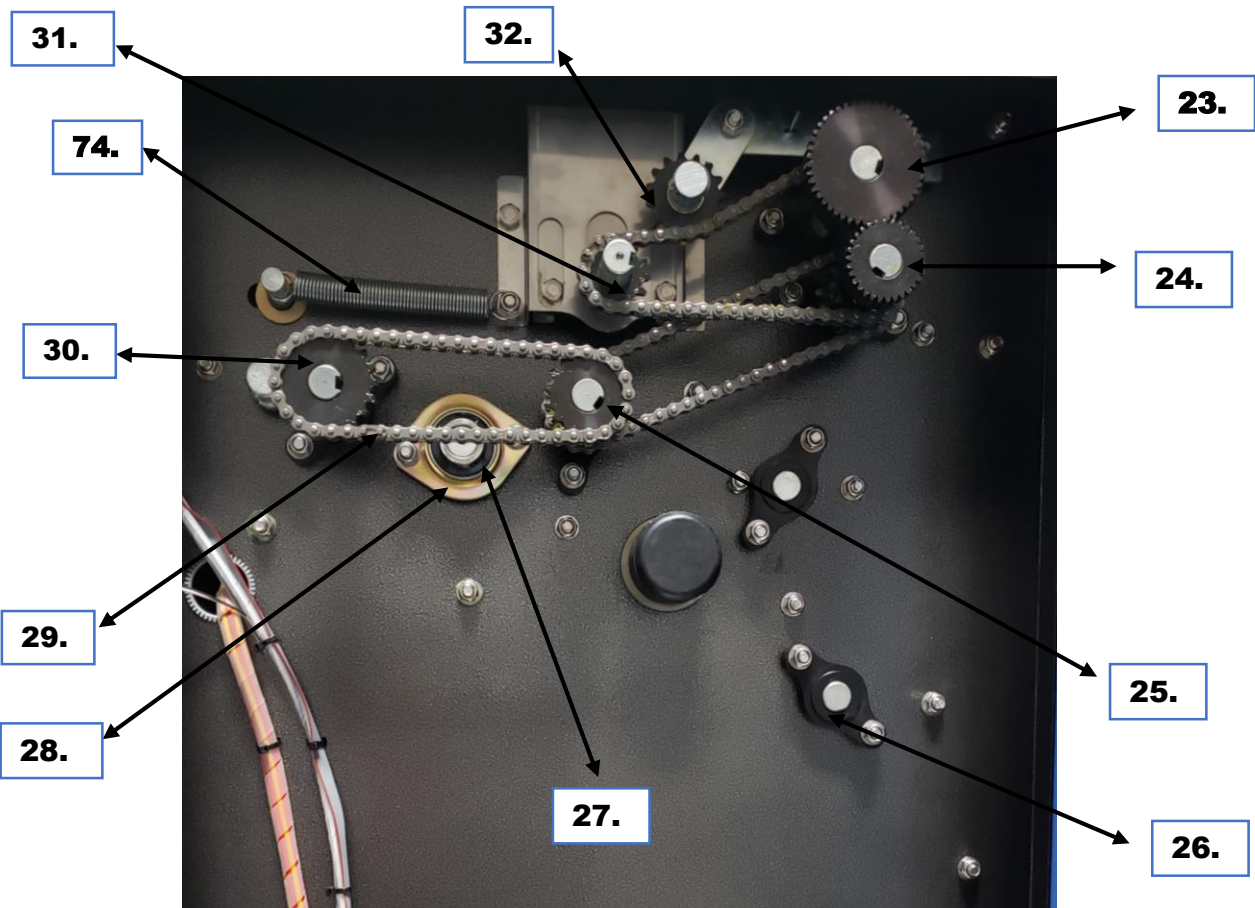

#34 RHM-SS1WAY (Long Shaft Support 1 Way) 37in


#52 RHM-SSS1WAY (Short Shaft Support 1 Way) 36in

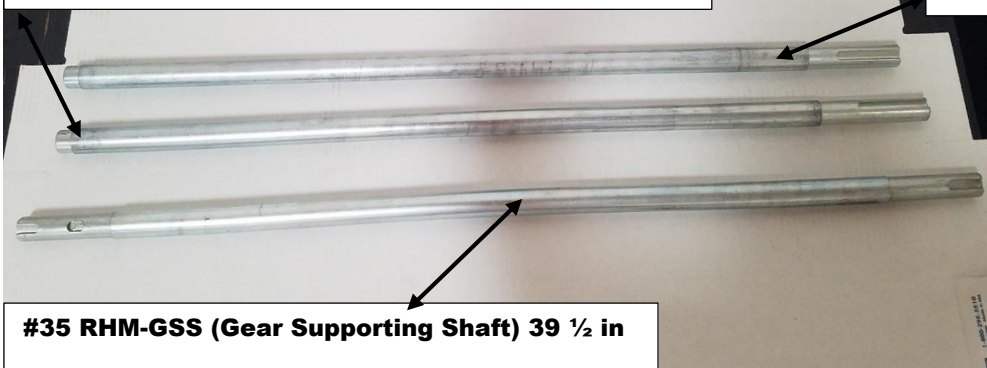

#35 RHM-GSS (Gear Supporting Shaft) 39 1/2 in

- 23.RHM-SPRK46
- 24.RHM-SPRK30
- 25.RHM-GRS16
- 26.RHM-SBRG
- 27.RHM-BBRG
- 28.RHM-BBH
- 29.RHM-CHAIN
- 30.RHM-GRS19
- 31.RHM-GRS13

- 32.RHM-GRS15
- 33.RHM-GRS15
- 34.RHM-SS1WAY
- 35.RHM-GSS
- 36.RHM-GRS15 FREE FLOW
- 37.RHM-GRS17
- 74. RHM-HRS

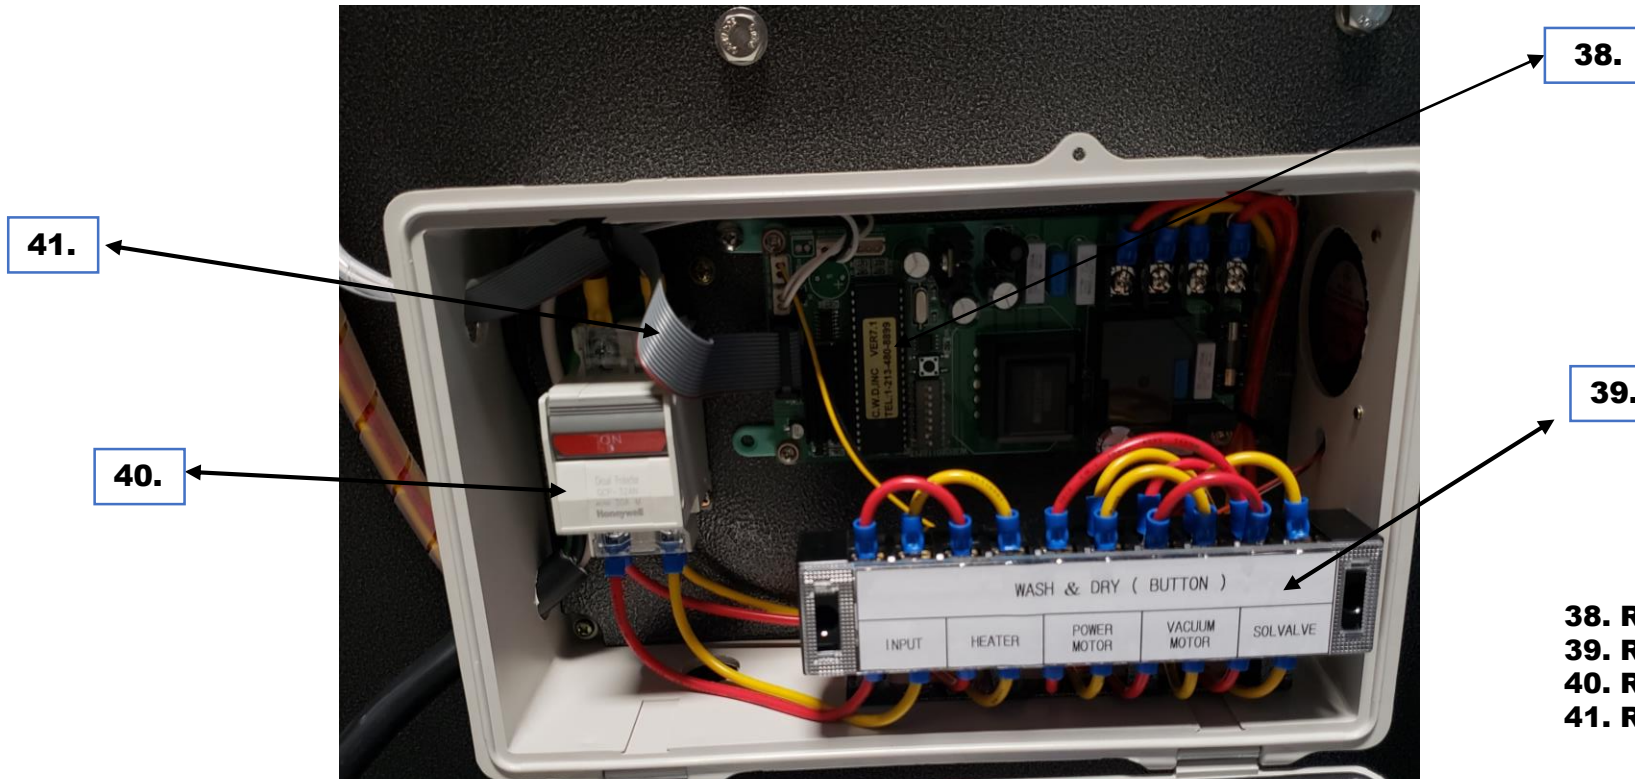

38.

39.


41.

40.

- 38. RHM-MB7.1 OR RHM-MB5.1
- 39. RHM-ETRM
- 40. RHM-CRB OR CRBH
- 41. RHM-LC




- 42. RHM-PL 10INCH
- 43. RHM-PBA33 OR PBA34
- 44. RHM-PBA37 OR PBA38
- 45. RHM-MPM545
- 46. RHM-MP1 STAGE OR MP 2STAGE
- 47. RHM-CPS
- 48. RHM-SVDEMA
- 49. RHM-SPRK61
- 50. RHM-PS 8INCH
- 51. RHM-GRS15
- 52. RHM-SSS1WAY
- 53. RHM-SPRK61
- 54. RHM-EHS
- 55. RHM-EHL

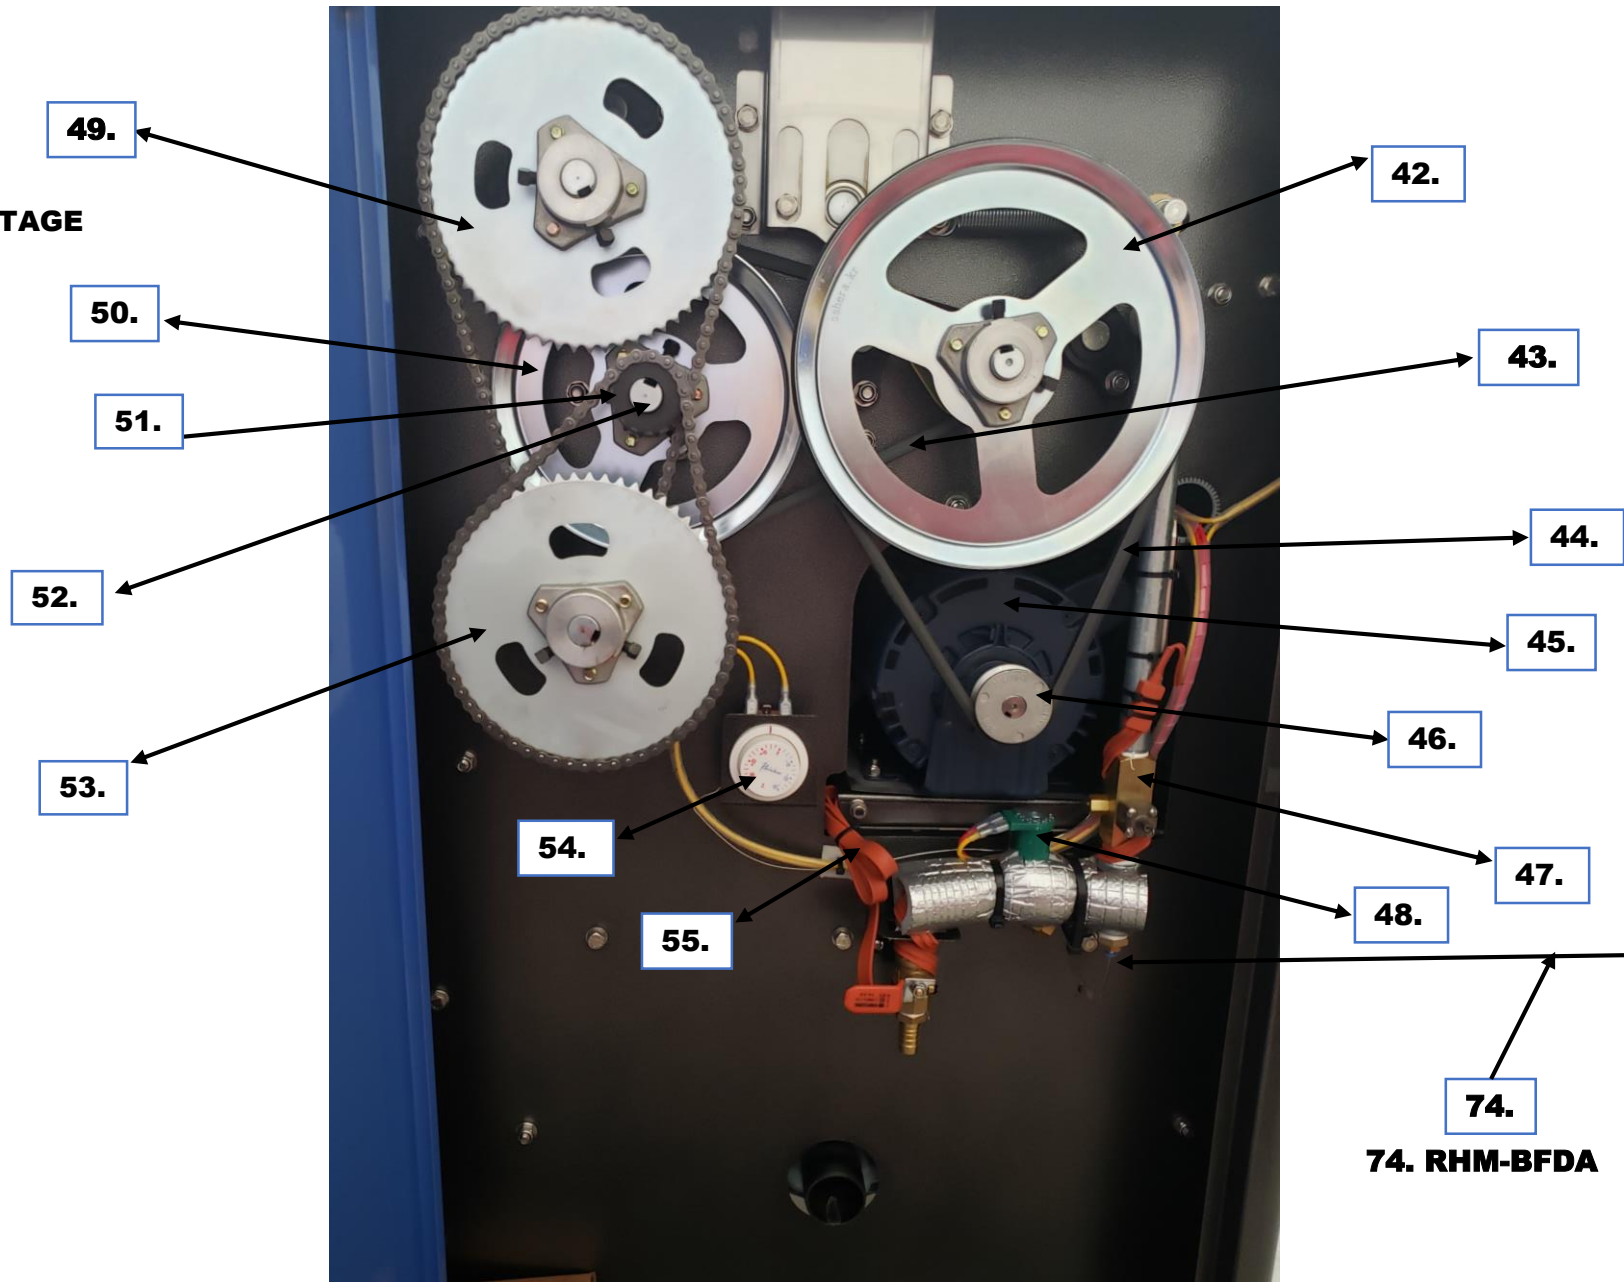


74. RHM-BFDA


- 56. RHM-GRDP
- 57. RHM-BPC
- 58. WATER CONNECTION
- 59. DRAINAGE OUTLET
- 60. RHM-TCB
- 61. RHM-TB
- 62. ELECTRICAL WIRE

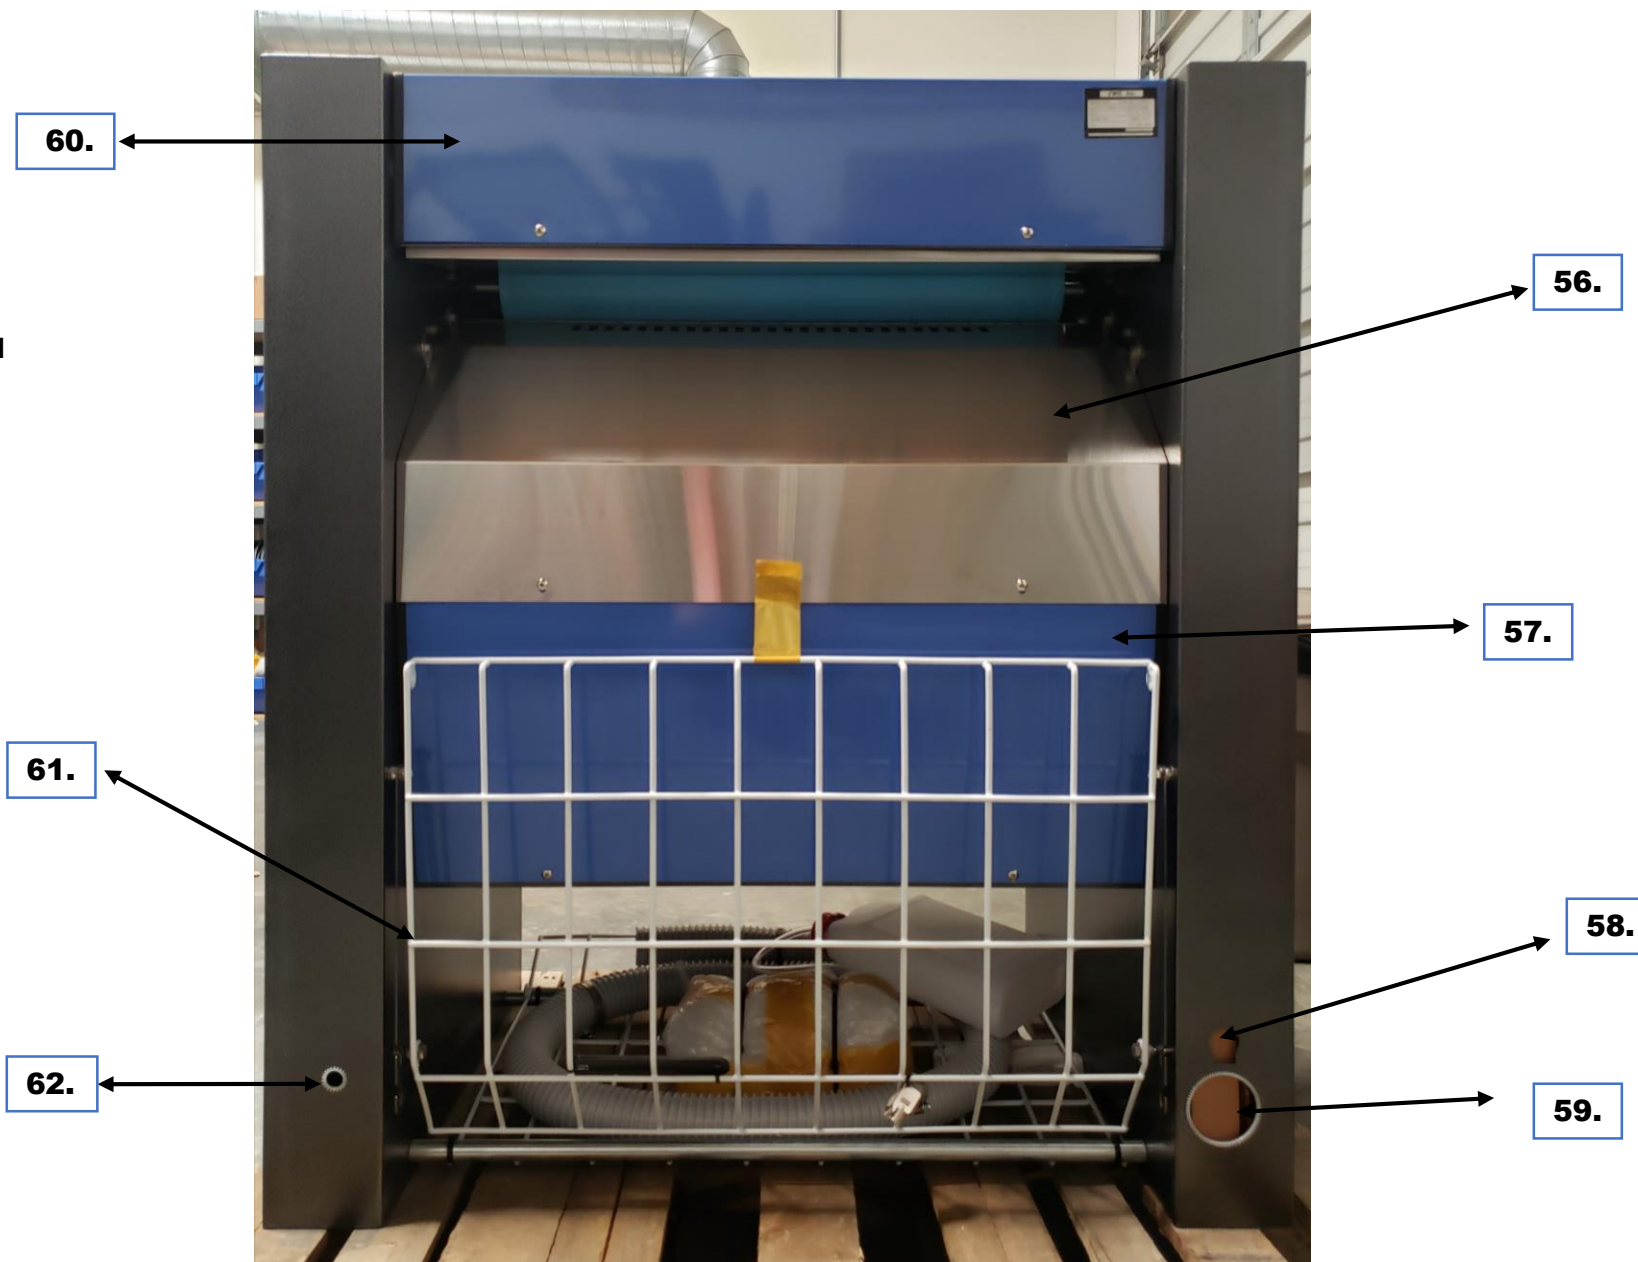

63. RHM-EMB (Extraction Metal Bar)

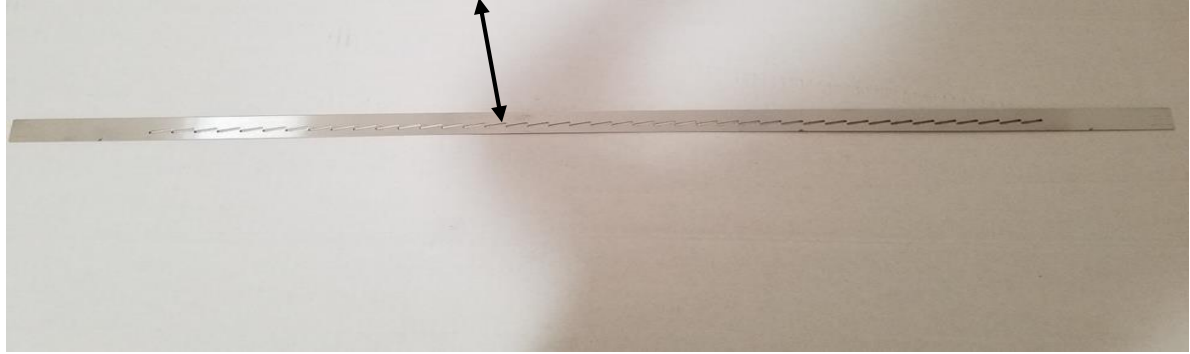


- 63. RHM-EMB**
- 64. RHM-VMG**
- 65. RHM-DG**
- RHM-RGL**
- RHM-RGS**
- 66. RHM-DBF**
- 67. RHM-HS**

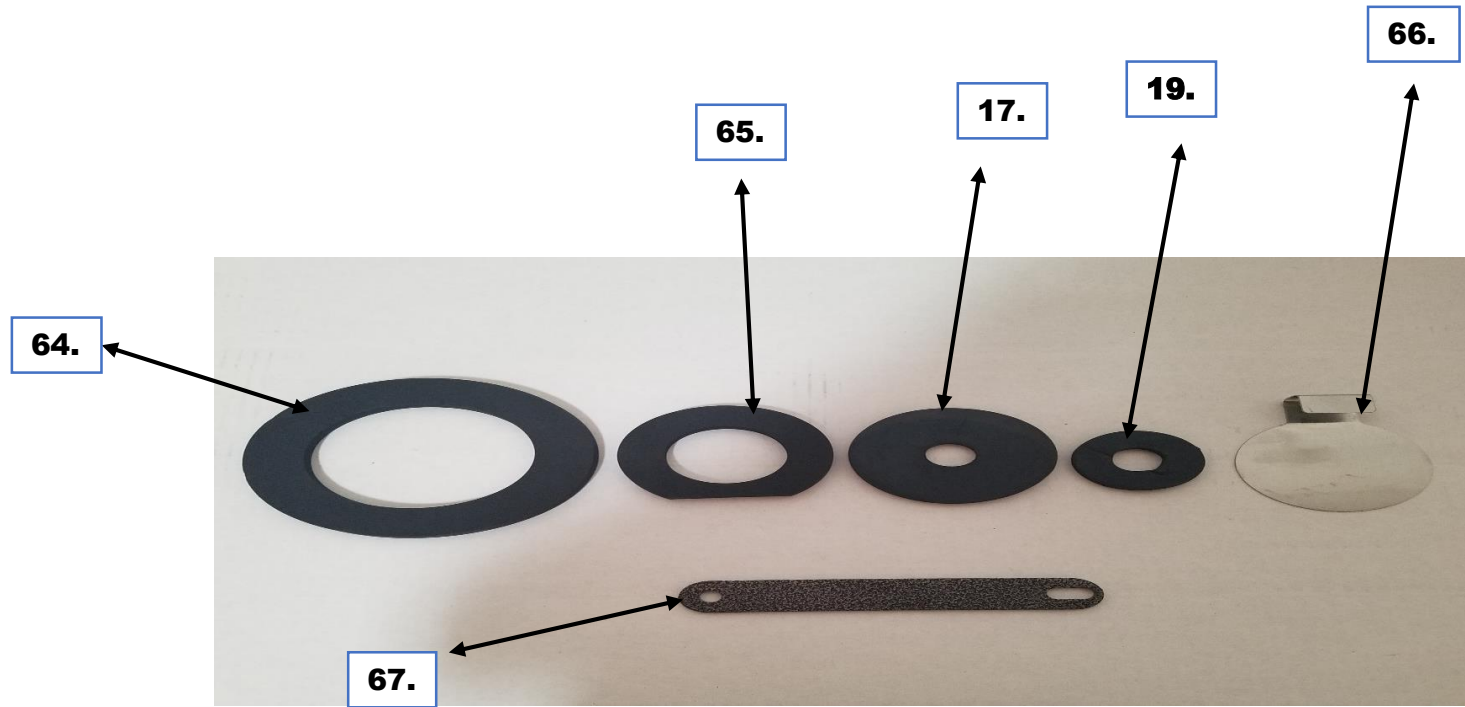



68.

**68. RHM-GSBP
69. PASS BUTTON CONTACT**

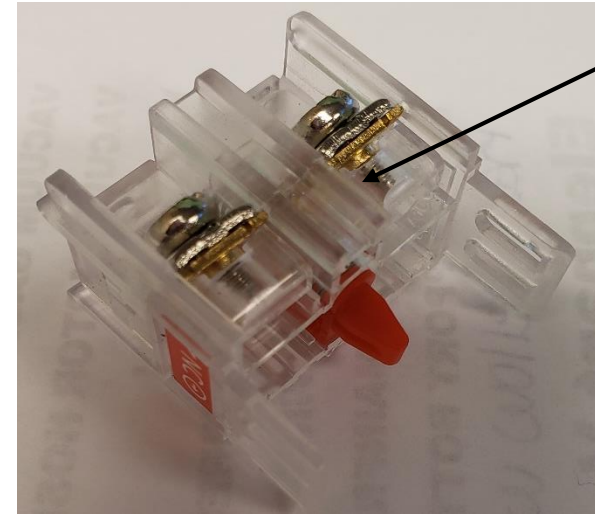

**69. PASS BUTTON
CONTACT**



**73. (RHM-CBG) Enclosed
Control Box no wires**

75.



75. RHM-WS



76.RHM-BH