


SOP: CWD Rhino Mat Washer Solenoid Cleaning

Symptom: Either water/detergent will not stop spraying or it won't start spraying.

In this case, troubleshooting steps have confirmed that the electrical circuit is good, and the issue resides with the valve itself. How do you go about checking/fixing this?

*Note: you do not have to remove the solenoid to perform this procedure.

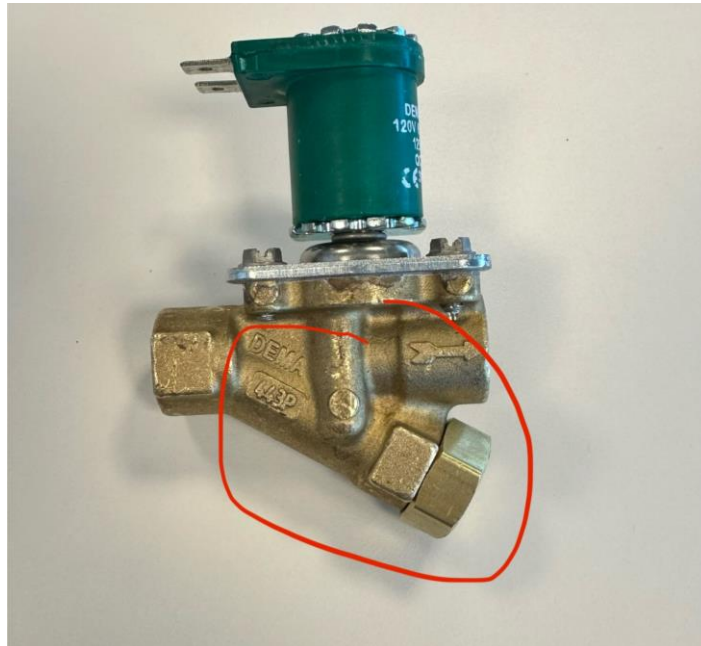


- Circled is the y-strainer that will need to be removed and cleaned out.

Step 1: Remove the y-strainer cap



Step 2: Pull out the y-strainer

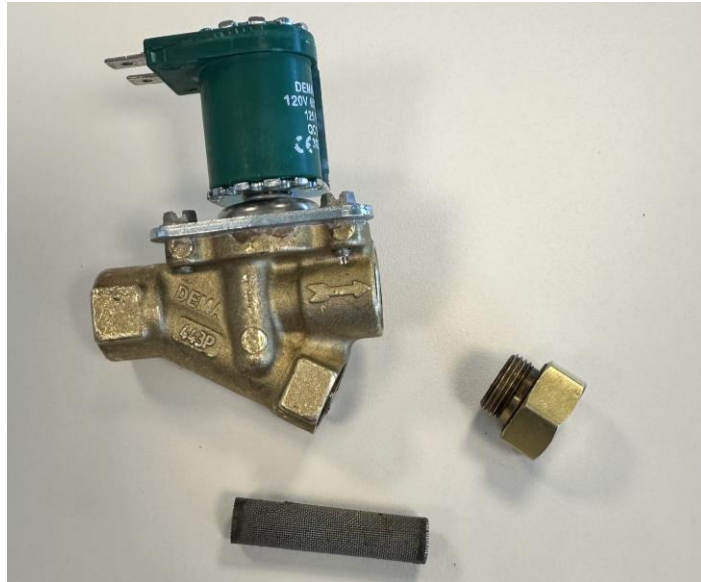

Step 3: Run the strainer under the faucet until clean. Make sure there is no debris in the valve itself.



Step 4: Re-install the y-strainer into the valve. Make sure it is seated firmly before installing the cap.



Step 5: Re-install the cap and tighten.



After finishing this procedure, operate the washer. If the issue is unchanged, replace the valve assembly. Part # P-RHM-SVDEMA