



Adjust the Anti Collision feature by entering, in pulses, the location both conveyors are to stall to prevent a collision at the exit of the car wash tunnel. Setup this feature by parking a vehicle on the end of the production conveyor and determining where a second vehicle, traveling on the conveyor behind it, is to stall. The conveyors will restart again after the first vehicle pulls away. Entering a value of "0" will disable the Anti Collision Feature.



Banner S18MB

After installation, the Banner MGAGE sensor will need to be "taught". With no vehicle over the sensor, press the "Teach" button once. The output will flash 12 times. The sensor is now "taught".



TPA Anti Collision Sensor Terminals

PO Box 4054
Akron, OH 44321
Mfg# 129852-001

DATE 2/10/2009
Revised

CONTROL VOLTAGE 24vDC

Drawing # CCSTPA3808.1.3

Page 12