



Changing Conveyor from Auto Mode to Manual Mode

Switch Conveyor A Motor Protection Breaker to the left into the off position (Horizontal). Then Power up the Conveyor B Motor Protection Breaker to the right into the on position (Vertical).

Please note: Conveyor B is running off of direct power and the speed control is invalid.