

CUSTOMER SERVICE

Should you need repair, parts may be sent to:

Laurel Metal Products
3500 W. Touhy Ave.
Skokie, IL 60076

Please include phone number and return address.

LIMITED WARRANTY

Laurel Metal Products warrants that the goods described in this warranty are free from defects in workmanship and materials for the period of one (1) year.

For breach of the express warranty and any implied warranty on this product, you are limited to the following damages:

If within one (1) year from the date of purchase, this product fails due to a defect in materials or workmanship, Laurel Metal will repair or replace it free of charge in no event shall Laurel Metal be liable for incidental or consequential damages. Laurel Metal's liability for any claims arising out of this warranty shall not exceed the purchase price of the product.

NOTE: some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you.

This warranty does not cover damage resulting from accident or from misuse or alteration of the product.

The term of this warranty begins on the date the product is purchased by you, and continues for a period of one (1) year from that date.

To obtain performance of any obligation under this warranty, you must return the complete product prepaid, together with a description of the problem, approximate date of purchase, your name, address and telephone number, to the address listed above.

This warranty gives you specific legal rights, and you may also have other rights that vary from state to state.

This warranty covers any electronic vender manufactured by Laurel Metal Products.

LAUREL

METAL PRODUCTS INCORPORATED

3500 W. Touhy Ave.
Skokie, IL 60076
Toll Free (888) 528-7358
(847) 674-0064
Fax # (847) 674-0094
www.laurelmetal.com

MODEL 399-MAX

Digi-Max LED display
Price adjustable up to \$99.75
Credit Card payment option
Multi-language display
Drop-Shelf dispensing




INSTRUCTION MANUAL

OPERATION AND SERVICE

ELECTRONIC REQUIREMENTS 24 VOLT AC

The power connection for the machine is on the circuit board. The terminal block for incoming power is located on the lower left corner of the Circuit Board. You will have to lift up the Cover/Instruction sheet to locate this terminal block, which is green in color.

24 VAC INPUT

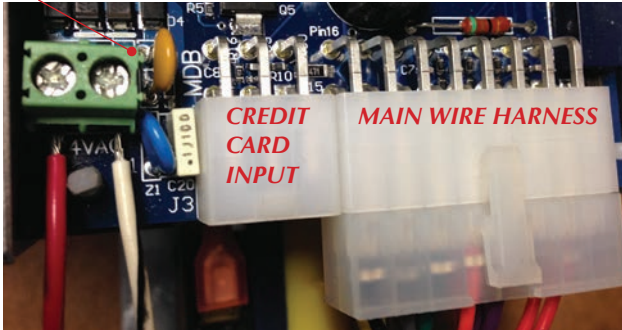

TRANSFORMER POWER REQUIREMENTS

The minimum power required for each vender is 1/2 amp (500mA). To run multiple venders on a transformer first determine the total amperage required, taking into account possible future additions. To determine the amperage output of a 24 volt transformer that is given in VA, divide the VA output by 24. For example, a 100 VA transformer would provide 4.2 amps ($100 \div 24$) of 24 volts AC power. This would be ample power for 8 venders. **A 40VA TRANSFORMER WOULD BE SUITABLE FOR 3 VENDERS.**

INSTALLATION

The vender can be mounted on any vertical surface without removing any part of the unit. Any standard fastener not larger than 3/8" diameter such as wood screws, expansion bolts, machine bolts or carriage bolts can be used depending on the type of wall. The vender weighs 45 lbs. empty.

The top two fasteners should be loosely installed in the wall with the heads of the fasteners projecting out approximately 1/4" from the wall. Raise the top shelf of the magazine into its vend position to expose one of the two top mounting holes in the back of the cabinet. The keyhole shape of the mounting holes will permit you to hang the cabinet on the two fasteners. While in this unsecured position, mark the bottom two mounting holes on the wall to accurately align the lower fasteners, if necessary remove the cabinet. Install the bottom fasteners to secure the cabinet.

COIN MECHANISM REMOVAL


To remove the Coin Mechanism, first remove the Empty Rod by dropping the top 2 shelves and disengaging the Rod from the slot at the side and top of the Magazine Assembly. To drop a shelf, use your finger under the shelf to push the Shelf Wire back out of the slot. Removing the Rod prevents the lever on the Empty Switch from getting bent when the Coin Mechanism is lifted upward upon removal.

Loosen, but do not remove, the 3 mounting screws and simply lift the Coin Mechanism up far enough for the Drive Cam to clear the Shelf Actuator.

When reinstalling the Coin Mechanism make sure that the Drive Cam is positioned back into the Shelf Actuator. If the Drive Cam is not inside of the Shelf Actuator the coin mechanism frame will not fit flush against the Shelf Assembly.

TROUBLESHOOTING

SYMPTOMS	LOOK FOR	NOTES
LED display out	Check for 24 volts (+/- 10%) power at the circuit board terminal block where power comes in.	Check transformer. See page 2 for power requirements. Power down machine for 5 seconds and power back up.
Product vended at less than the vend price.	PULSE VALUE is set incorrectly. Factory setting is \$0.25	See page 6 for instructions on changing the PULSE VALUE
Motor runs, no shelf drop	Shelf latching wire damaged, bent, stuck at edge of slot.	Apply light amount of grease on protruding shelf latch wire.
Sold Out, Sorry on display.	The top shelf is in the down position.	The long metal rod is what trips the empty switch, then Sold Out, Sorry appears on the display.
Problem With Column 1	Motor not completing full rotation.	Power down machine for 5 seconds. Take coin mech off and test vend it away from shelf unit.

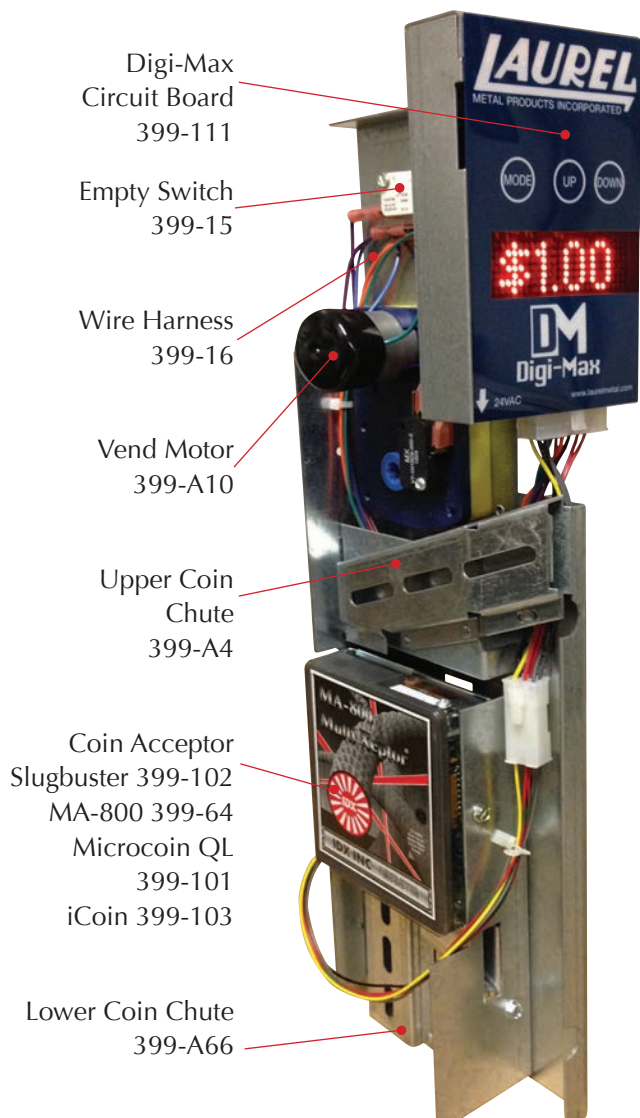

COIN MECHANISM FEATURES

The vend count is displayed when the **MODE** button is pressed one time. The number displayed is the total number of products sold since initial installation of the vending machine. The counter is non-resettable so it can't be tampered with. You can now implement inventory control of your vending.

The vender will be factory set to vend at \$1.00. To change the vend price press the **MODE** button two times and the current price will display. Now change the price with the **UP** or **DOWN** buttons. When the new price is displayed press the **MODE** button one time to finish the change.

Pricing is adjustable from 25¢ - \$99.75

Programming Steps:

Vend Counter: To access the vend counter press **MODE** once, the display will show the total vends since initial installation.

(Machine will return to the normal run mode after 20 seconds of idle time – this is the same for any programming step)

Price Change: To access price changing press **MODE** twice, the current price setting will display - change price by using the **UP** or **DOWN** buttons.

Display Brightness: To access the display brightness setting press **MODE** three times, then press the **UP** or **DOWN** buttons to toggle between the high and low settings.

Choose Payment Type: To select the payment options press **MODE** four times to choose from: **COIN / CREDIT CARD / BOTH**

COIN – coin acceptance only

CREDIT CARD – credit card acceptance only

BOTH – coin or credit card acceptance

Language Selection: To access the language selections press the **MODE** button five times, then press the **UP** or **DOWN** buttons to select the desired display language.

COIN ACCEPTORS

SLUGBUSTER – SINGLE COIN



This acceptor sends one pulse to the LED display for every coin or token entered. The factory setting for the pulse value is \$0.25 but this can be changed if needed. To change, press and hold in the **MODE** button until the display reads; **SET PULSE VALUE**

Use the **UP** or **DOWN** buttons to change the pulse value from \$0.25 to your desired value.

Tap the **MODE** button once to finish the change.

Example – if you only accept dollar coins (or dollar tokens) then the pulse value needs to be changed from \$0.25 to \$1.00.

MA-800 – MULTI-COIN



This acceptor will take up to 6 different coins, or tokens, and the value of any coin can be programmed in. Quarters are pre-programmed in switch #6 and dollar coins in #5. Refer to the enclosed MA-800 instruction manual for programming instructions if tokens or any other coins are to be accepted.

When programming in any new coins, it is recommended to remove the acceptor from the coin mechanism frame and drop the 6 sample coins in by hand. Optimal programming will be obtained by dropping the coins in the acceptor by hand rather than by running the sample coins down the metal coin chute.

To remove the MA-800 acceptor from the coin mechanism frame, loosen the 2 mounting screws on the front face of the coin mechanism, unplug the white ribbon cable, then lift up the coin mechanism to detach it. Remove the 2 screws holding the MA800 in place and pull it out to begin the programming. **Do not unplug the MA-800 from circuit board when programming, as it needs power to operate.**

MICROCOIN QL – MULTI-COIN



This acceptor will take up to 12 different coins, or tokens, and the value of any coin can be programmed in. Quarters are pre-programmed in switch #10 and dollar coins are in #11.


Refer to the enclosed QL instruction manual for programming instructions if tokens or any other coins are to be accepted. **Do not unplug the QL from circuit board when programming, as it needs power to operate.**

MAGIKIST iCOIN – MULTI-COIN



This acceptor is preprogrammed to take quarters and/or dollar coins in addition to 3 other coins or tokens where the value can be programmed in. Refer to the enclosed iCoin instruction manual for programming instructions if tokens or other coins are to be accepted.

Do not unplug the iCoin from the circuit board when programming, as it needs power to operate.

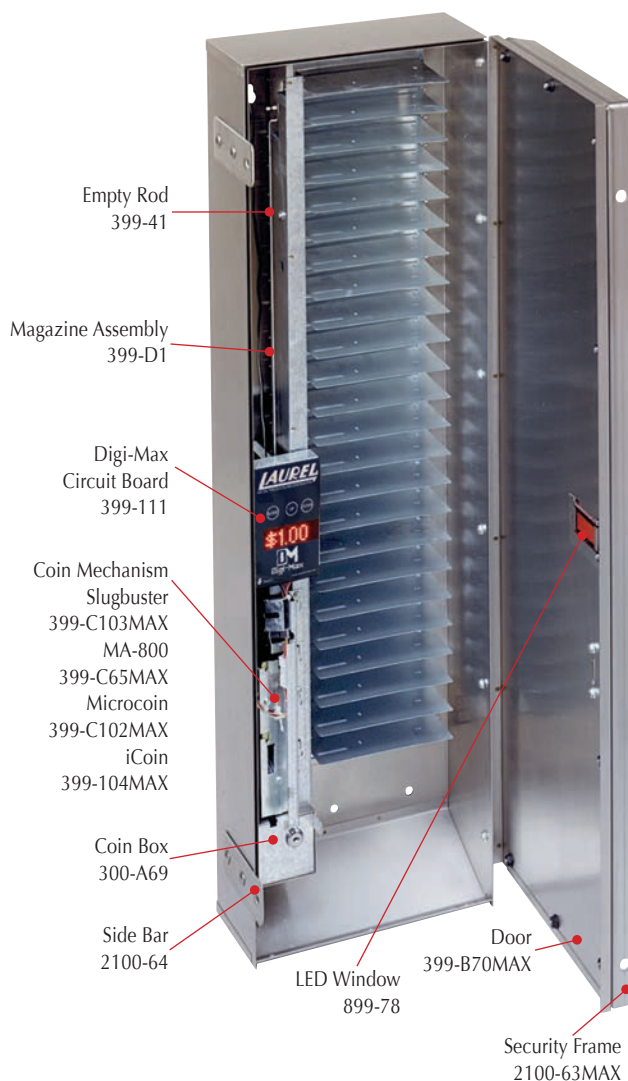

LOADING

The shelves can be easily and quickly reset into the vend position (horizontal) by running the index finger of your right hand up the side of the shelves. This “fanning” will take only seconds to reset all 24 shelves.

The top shelf has an automatic empty device, the Empty Rod, which can be seen to the left of the Shelf Assembly, above the Coin Mechanism. When the last product is sold and this top shelf drops, the bottom of the Empty Rod trips the Empty Switch causing the Electronic Acceptor to reject all coins. The **LED** display will scroll **'SOLD OUT... SORRY!'**. Therefore, it is extremely important to load product from the top down if the vender will not be fully loaded during restocking. Coins will be returned if the vender is sold out or if there is a power outage.